

CODES	DESIGNATION
B0000	ISO/SAE Reserved / Vehicle speed information circuit malfunction (Chevy, GM)
B0001	Driver Frontal Stage 1 Deployment Control (Subfault)
B0002	Driver Frontal Stage 2 Deployment Control (Subfault)
B0003	Driver Frontal Stage 3 Deployment Control (Subfault)
B0004	Driver Knee Bolster Deployment Control (Subfault)
B0005	Collapsible Steering Column Deployment Control (Subfault)
B0006	ISO/SAE Reserved
B0007	ISO/SAE Reserved
B0008	ISO/SAE Reserved
B0009	ISO/SAE Reserved
B000A	ISO/SAE Reserved
B000B	ISO/SAE Reserved
B000C	ISO/SAE Reserved
B000D	ISO/SAE Reserved
B000E	ISO/SAE Reserved
B000F	ISO/SAE Reserved
B0010	Passenger Frontal Stage 1 Deployment Control (Subfault)
B0011	Passenger Frontal Stage 2 Deployment Control (Subfault)
B0012	Passenger Frontal Stage 3 Deployment Control (Subfault)
B0013	Passenger Knee Bolster Deployment Control (Subfault)
B0014	ISO/SAE Reserved
B0015	ISO/SAE Reserved
B0016	ISO/SAE Reserved
B0017	ISO/SAE Reserved
B0018	ISO/SAE Reserved
B0019	ISO/SAE Reserved
B001A	ISO/SAE Reserved
B001B	ISO/SAE Reserved
B001C	ISO/SAE Reserved
B001D	ISO/SAE Reserved

B001E	ISO/SAE Reserved
B001F	ISO/SAE Reserved
B0020	Left Side Airbag Deployment Control (Subfault)
B0021	Left Curtain Deployment Control 1 (Subfault)
B0022	Left Curtain Deployment Control 2 (Subfault)
B0023	ISO/SAE Reserved
B0024	ISO/SAE Reserved
B0025	ISO/SAE Reserved
B0026	ISO/SAE Reserved
B0027	ISO/SAE Reserved
B0028	Right Side Airbag Deployment Control (Subfault)
B0029	Right Curtain Deployment Control 1 (Subfault)
B002A	Right Curtain Deployment Control 2 (Subfault)
B002B	ISO/SAE Reserved
B002C	ISO/SAE Reserved
B002D	ISO/SAE Reserved
B002E	ISO/SAE Reserved
B002F	ISO/SAE Reserved
B0030	Second Row Left Side Airbag Deployment Control (Subfault)
B0031	Second Row Left Frontal Stage 1 Deployment Control (Subfault)
B0032	Second Row Left Frontal Stage 2 Deployment Control (Subfault)
B0033	Second Row Left Frontal Stage 3 Deployment Control (Subfault)
B0034	ISO/SAE Reserved
B0035	ISO/SAE Reserved
B0036	ISO/SAE Reserved
B0037	ISO/SAE Reserved
B0038	Second Row Right Side Airbag Deployment Control (Subfault)
B0039	Second Row Right Frontal Stage 1 Deployment Control (Subfault)
B003A	Second Row Right Frontal Stage 2 Deployment Control (Subfault)
B003B	Second Row Right Frontal Stage 3 Deployment Control (Subfault)
B003C	ISO/SAE Reserved
B003D	ISO/SAE Reserved

B003E	ISO/SAE Reserved
B003F	ISO/SAE Reserved
B0040	Third Row Left Side Airbag Deployment Control (Subfault)
B0041	Third Row Left Frontal Stage 1 Deployment Control (Subfault)
B0042	Third Row Left Frontal Stage 2 Deployment Control (Subfault)
B0043	Third Row Left Frontal Stage 3 Deployment Control (Subfault)
B0044	ISO/SAE Reserved
B0045	ISO/SAE Reserved
B0046	ISO/SAE Reserved
B0047	ISO/SAE Reserved
B0048	Third Row Right Side Airbag Deployment Control (Subfault)
B0049	Third Row Right Frontal Stage 1 Deployment Control (Subfault)
B004A	Third Row Right Frontal Stage 2 Deployment Control (Subfault)
B004B	Third Row Right Frontal Stage 3 Deployment Control (Subfault)
B004C	ISO/SAE Reserved
B004D	ISO/SAE Reserved
B004E	ISO/SAE Reserved
B004F	ISO/SAE Reserved
B0050	Driver Seatbelt Sensor (Subfault)
B0051	First Row Center Seatbelt Sensor (Subfault)
B0052	Passenger Seatbelt Sensor (Subfault)
B0053	Second Row Left Seatbelt Sensor (Subfault)
B0054	Second Row Center Seatbelt Sensor (Subfault)
B0055	Second Row Right Seatbelt Sensor (Subfault)
B0056	Third Row Left Seatbelt Sensor (Subfault)
B0057	Third Row Center Seatbelt Sensor (Subfault)
B0058	Third Row Right Seatbelt Sensor (Subfault)
B0059	ISO/SAE Reserved
B005A	ISO/SAE Reserved
B005B	ISO/SAE Reserved
B005C	ISO/SAE Reserved
B005D	ISO/SAE Reserved

B005E	ISO/SAE Reserved
B005F	ISO/SAE Reserved
B0060	Driver Seatbelt Tension Sensor (Subfault)
B0061	Passenger Seatbelt Tension Sensor (Subfault)
B0062	ISO/SAE Reserved
B0063	ISO/SAE Reserved
B0064	ISO/SAE Reserved
B0065	ISO/SAE Reserved
B0066	ISO/SAE Reserved
B0067	ISO/SAE Reserved
B0068	ISO/SAE Reserved
B0069	ISO/SAE Reserved
B006A	ISO/SAE Reserved
B006B	ISO/SAE Reserved
B006C	ISO/SAE Reserved
B006D	ISO/SAE Reserved
B006E	ISO/SAE Reserved
B006F	ISO/SAE Reserved
B0070	Driver Seatbelt Pretensioner "A" Deployment Control (Subfault)
B0071	First Row Center Seatbelt Pretensioner Deployment Control (Subfault)
B0072	Passenger Seatbelt Pretensioner "A" Deployment Control (Subfault)
B0073	Second Row Left Seatbelt Pretensioner Deployment Control (Subfault)
B0074	Second Row Center Seatbelt Pretensioner Deployment Control (Subfault)
B0075	Second Row Right Seatbelt Pretensioner Deployment Control (Subfault)
B0076	Third Row Left Seatbelt Pretensioner Deployment Control (Subfault)
B0077	Third Row Center Seatbelt Pretensioner Deployment Control (Subfault)
B0078	Third Row Right Seatbelt Pretensioner Deployment Control (Subfault)
B0079	Driver Seatbelt Pretensioner "B" Deployment Control (Subfault)
B007A	Passenger Seatbelt Pretensioner "B" Deployment Control (Subfault)
B007B	Second Row Left Seatbelt Pretensioner "B" Deployment Control (Subfault)
B007C	Second Row Right Seatbelt Pretensioner "B" Deployment Control (Subfault)
B007D	Second Row Center Seatbelt Pretensioner "B" Deployment Control (Subfault)

B007E	Driver Seatbelt Pretensioner "C" Deployment Control (Subfault)
B007F	Passenger Seatbelt Pretensioner "C" Deployment Control (Subfault)
B0080	Driver Seatbelt Load Limiter Deployment Control (Subfault)
B0081	First Row Center Seatbelt Load Limiter Deployment Control (Subfault)
B0082	Passenger Seatbelt Load Limiter Deployment Control (Subfault)
B0083	Second Row Left Seatbelt Load Limiter Deployment Control (Subfault)
B0084	Second Row Center Seatbelt Load Limiter Deployment Control (Subfault)
B0085	Second Row Right Seatbelt Load Limiter Deployment Control (Subfault)
B0086	Third Row Left Seatbelt Load Limiter Deployment Control (Subfault)
B0087	Third Row Center Seatbelt Load Limiter Deployment Control (Subfault)
B0088	Third Row Right Seatbelt Load Limiter Deployment Control (Subfault)
B0089	ISO/SAE Reserved
B008A	ISO/SAE Reserved
B008B	ISO/SAE Reserved
B008C	ISO/SAE Reserved
B008D	ISO/SAE Reserved
B008E	ISO/SAE Reserved
B008F	ISO/SAE Reserved
B0090	Left Frontal Restraints Sensor (Subfault)
B0091	Left Side Restraints Sensor 1 (Subfault)
B0092	Left Side Restraints Sensor 2 (Subfault)
B0093	Left Side Restraints Sensor 3 (Subfault)
B0094	Center Frontal Restraints Sensor (Subfault)
B0095	Right Frontal Restraints Sensor (Subfault)
B0096	Right Side Restraints Sensor 1 (Subfault)
B0097	Right Side Restraints Sensor 2 (Subfault)
B0098	Right Side Restraints Sensor 3 (Subfault)
B0099	Roll Over Sensor (Subfault)
B009A	Left Side Restraints Sensor 4 (Subfault)
B009B	Left Side Restraints Sensor 5 (Subfault)
B009C	Left Side Restraints Sensor 6 (Subfault)
B009D	Right Side Restraints Sensor 4 (Subfault)

B009E	Right Side Restraints Sensor 5 (Subfault)
B009F	Right Side Restraints Sensor 6 (Subfault)
B00A0	Occupant Classification System (Subfault)
B00A1	Occupant Position System (Subfault)
B00A2	ISO/SAE Reserved
B00A3	ISO/SAE Reserved
B00A4	ISO/SAE Reserved
B00A5	ISO/SAE Reserved
B00A6	ISO/SAE Reserved
B00A7	ISO/SAE Reserved
B00A8	ISO/SAE Reserved
B00A9	ISO/SAE Reserved
B00AA	ISO/SAE Reserved
B00AB	ISO/SAE Reserved
B00AC	ISO/SAE Reserved
B00AD	ISO/SAE Reserved
B00AE	ISO/SAE Reserved
B00AF	ISO/SAE Reserved
B00B0	Driver Seat Occupant Classification Sensor "A" (Subfault)
B00B1	Driver Seat Occupant Classification Sensor "B" (Subfault)
B00B2	Driver Seat Occupant Classification Sensor "C" (Subfault)
B00B3	Driver Seat Occupant Classification Sensor "D" (Subfault)
B00B4	Driver Seat Occupant Classification Sensor "E" (Subfault)
B00B5	Driver Seat Track Position Restraints Sensor (Subfault)
B00B6	Driver Seat Recline Position Restraints Sensor (Subfault)
B00B7	Driver Seat Occupant Position Sensor "A" (Subfault)
B00B8	Driver Seat Occupant Position Sensor "B" (Subfault)
B00B9	Driver Seat Occupant Position Sensor "C" (Subfault)
B00BA	Driver Seat Occupant Position Sensor "D" (Subfault)
B00BB	Driver Seat Occupant Position Sensor "E" (Subfault)
B00BC	ISO/SAE Reserved
B00BD	ISO/SAE Reserved

B00BE	ISO/SAE Reserved
B00BF	ISO/SAE Reserved
B00C0	Passenger Seat Occupant Classification Sensor "A" (Subfault)
B00C1	Passenger Seat Occupant Classification Sensor "B" (Subfault)
B00C2	Passenger Seat Occupant Classification Sensor "C" (Subfault)
B00C3	Passenger Seat Occupant Classification Sensor "D" (Subfault)
B00C4	Passenger Seat Occupant Classification Sensor "E" (Subfault)
B00C5	Passenger Seat Track Position Restraints Sensor (Subfault)
B00C6	Passenger Seat Recline Position Restraints Sensor (Subfault)
B00C7	Passenger Seat Occupant Position Sensor "A" (Subfault)
B00C8	Passenger Seat Occupant Position Sensor "B" (Subfault)
B00C9	Passenger Seat Occupant Position Sensor "C" (Subfault)
B00CA	Passenger Seat Occupant Position Sensor "D" (Subfault)
B00CB	Passenger Seat Occupant Position Sensor "E" (Subfault)
B00CC	ISO/SAE Reserved
B00CD	ISO/SAE Reserved
B00CE	ISO/SAE Reserved
B00CF	ISO/SAE Reserved
B00D0	Driver Seatbelt Indicator (Subfault)
B00D1	Passenger Seatbelt Indicator (Subfault)
B00D2	Restraint System Malfunction Indicator 1 (Subfault)
B00D3	Restraint System Malfunction Indicator 2 (Subfault)
B00D4	Restraint System Malfunction Audible Indicator (Subfault)
B00D5	Restraint System Passenger Disable Indicator (Subfault)
B00D6	ISO/SAE Reserved
B00D7	ISO/SAE Reserved
B00D8	ISO/SAE Reserved
B00D9	ISO/SAE Reserved
B00DA	ISO/SAE Reserved
B00DB	ISO/SAE Reserved
B00DC	ISO/SAE Reserved
B00DD	ISO/SAE Reserved

B00DE	ISO/SAE Reserved
B00DF	Passenger Restraints Disable Switch (Subfault)
B00E0	Third Row Left Seatbelt Pretensioner "B" Deployment Control (Subfault)
B00E1	Third Row Right Seatbelt Pretensioner "B" Deployment Control (Subfault)
B00E2	Third Row Center Seatbelt Pretensioner "B" Deployment Control (Subfault)
B00E3	Second Row Left Seatbelt Pretensioner "C" Deployment Control (Subfault)
B00E4	Second Row Right Seatbelt Pretensioner "C" Deployment Control (Subfault)
B00E5	Second Row Center Seatbelt Pretensioner "C" Deployment Control (Subfault)
B00E6	Third Row Right Seatbelt Pretensioner "C" Deployment Control (Subfault)
B00E7	Third Row Left Seatbelt Pretensioner "C" Deployment Control (Subfault)
B00E8	Third Row Center Seatbelt Pretensioner "C" Deployment Control (Subfault)
B00E9	ISO/SAE Reserved
B0101	Left Front Impact Sensor
B0500	Passenger Temperature Control "Warmer" Switch - Circuit Range/Performance

--	--